

INSTALLER/CONSUMER RETAIN THIS APPLIANCE
MANUAL WITH THE INSTALLED APPLIANCE



INSTALLATION AND OPERATING INSTRUCTIONS

GOLDEN BLOUNT TOP-VENT FIREPLACES
MODEL HD5030-TV "EL GRANDE"

*HD4240-TV "SKYSCRAPER"

PFS APPROVED FOR NATURAL GAS OR *PROPANE GAS

* IF MODEL HD4240-TV IS USED WITH PROPANE GAS A POWER VENT FAN
MUST BE USED. CONTACT GOLDEN BLOUNT FOR INFO. 1-800-833-1139



**IMPORTANT! Read all instructions carefully before starting
installation. Failure to follow these instructions may result in
property damage, personal injury or possible loss of life.**

WARNING: If the information in these instructions is not followed exactly, a fire or explosion may result causing property damage, personal injury or death.

– Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

– WHAT TO DO IF YOU SMELL GAS:

- Do not try to light any appliance.
 - Do not touch any electrical switch; do not use any phone in your building.
 - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
 - If you cannot reach your gas supplier, call the fire department.
- Installation and service must be performed by a qualified installer, service agency or the gas supplier.

- The Flue Damper must be in the full open position when burning the gas logs.
- This fireplace is to be burned only with the gas log set supplied with the fireplace. Burning other items could cause a fire hazard or injury.
- For best results, Natural Gas pressure should be 7" to 12" W.C. and 11" W.C. for Propane Gas.
- To simulate real wood burning, the gas burner is designed to burn a yellow flame. It is normal for the logs to soot-up. The soot can be easily removed with a vacuum cleaner or soft brush.
- Check the label on the firebox to assure the proper gas type. Never use anything but the correct gas type for your fireplace.

MANUFACTURED BY:

Golden Blount


4301 WESTGROVE DRIVE
ADDISON, TX 75001

This appliance complies with National Safety and is tested and listed to ANSI Z21.50 as Vented Gas fireplaces. Installation must conform to local codes. In the absence of local codes, installation must conform with the current National Fuel Gas Code, ANSI Z223.1.

TABLE OF CONTENTS

Section


Layout Options	2
Identification of Parts	3
Building Codes and Safety Standards.....	4
Piping and Gas Pressure Requirements	5
Installation Instructions	6
Log Placement.....	11
Operating Guidelines.....	14
Wiring Diagrams.....	15 -17
Lighting Instructions.....	18
Trouble Shooting	20
Replacement Parts	22

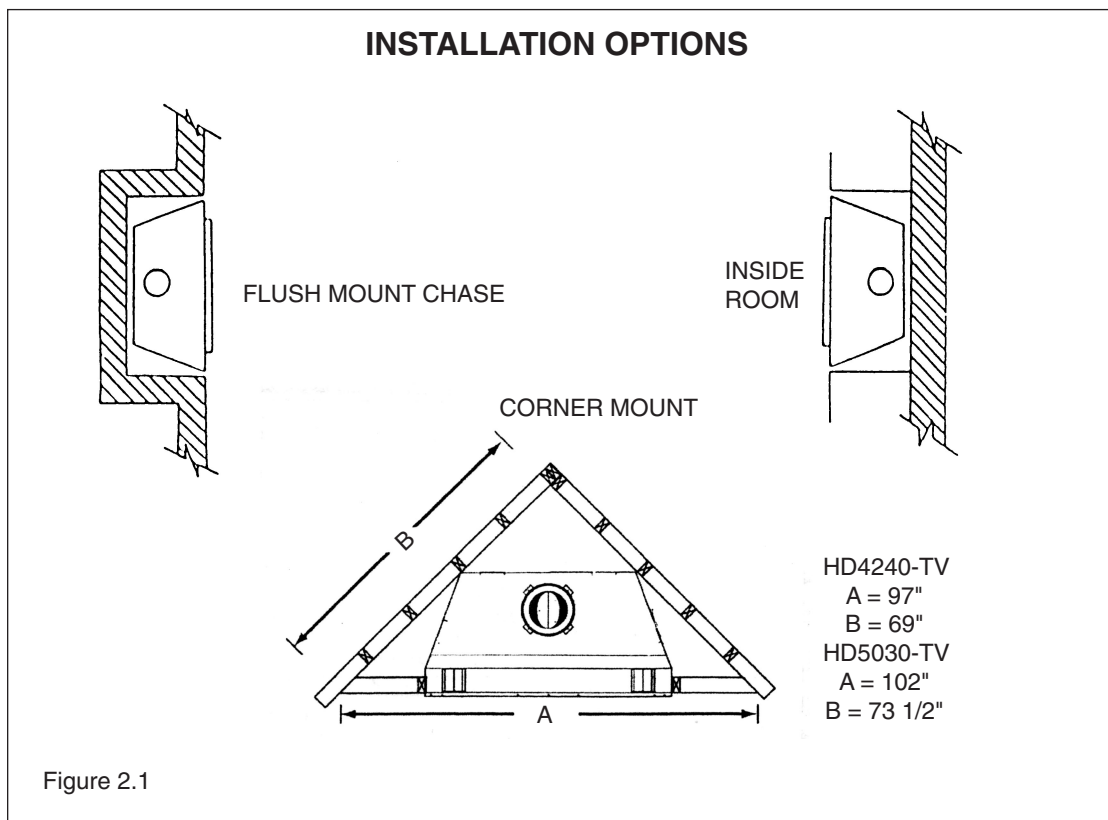

HD5030-TV AND HD4240-TV



INTERIOR VIEW

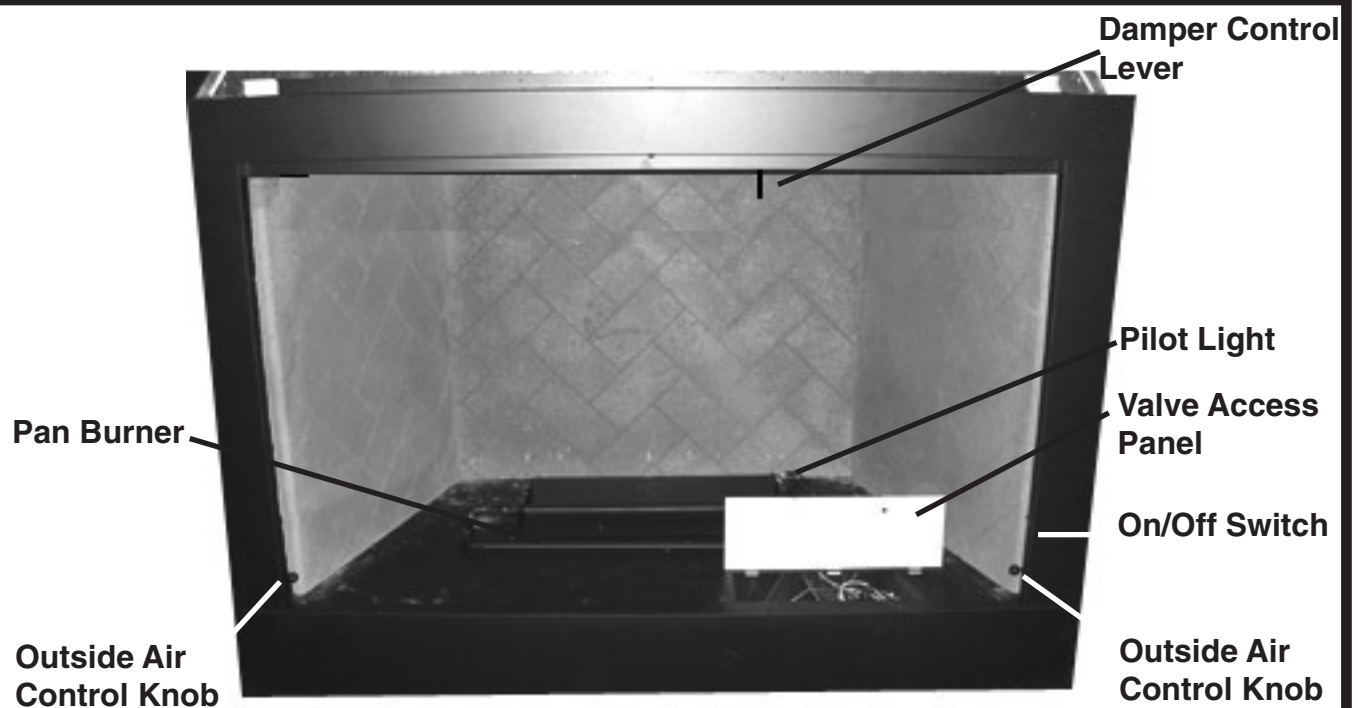

BUILDING CODES AND SAFETY STANDARDS

The design of this FIREPLACE ACCESSORY has been tested and is listed with CSA INTERNATIONAL in accordance with THE AMERICAN NATIONAL STANDARDS INSTITUTE - ANSI Z21.50, CSA Test Report No. 188842-1049553.

This manual serves only as a basic guideline for installation and use of this firebox and gas piping. The complete installation must be in accordance with local codes and ordinances, or, in the absence of local codes, with the American National Standards Institute National Fuel Gas Code Z223.1 latest edition.

GENERAL INFORMATION

HD5030-TV OR HD4240-TV IS A TOP-VENTED GAS FIREPLACE. IT IS DESIGNED TO BURN BY DRAWING COMBUSTION AIR FROM THE ROOM THE UNIT IS INSTALLED IN AND/OR THE OUTSIDE AIR KIT PROVIDED WITH THIS APPLIANCE.

THE EXHAUST FLUE GASES ARE TO BE VENTED THROUGH THE TOP-VENT USING 10" B-TYPE GAS VENT PIPE.

THE CONTROL SYSTEM IS A MILLIVOLT TYPE THAT INCLUDES A ON-OFF SHUT-OFF VALVE, A GAS CONTROL VALVE, A STANDING PILOT LIGHT ASSEMBLY, PIEZO IGNITOR AND ON-OFF ROCKER SWITCH.

WARNING: THIS UNIT IS NOT FOR USE WITH SOLID FUEL.

NOTE: INSTALLATION AND REPAIR SHOULD BE DONE BY A QUALIFIED SERVICE PERSON. THE APPLIANCE SHOULD BE INSPECTED BEFORE USE AND AT LEAST ANNUALLY BY A PROFESSIONAL SERVICE PERSON. MORE FREQUENT CLEANING MAY BE REQUIRED DUE TO EXCESSIVE LINT FROM CARPETING, BEDDING MATERIAL, ETC. IT IS IMPERATIVE THAT THE UNITS CONTROL COMPARTMENT, BURNERS, AND CIRCULATING AIR PASSAGE-WAYS BE KEPT CLEAN TO PROVIDE ADEQUATE COMBUSTION AND VENTILATION AIR.

NOTE: B-Vent appliances are not designed to operate in negatively pressured environments (pressure within the home is less than pressures outside). Significant negatively pressured environments caused by weather, home design or other devices may impact the operation of this appliance. Negative pressures may result in poor flame appearance, sooting, damage to property and/or severe personal injury. Do not operate this appliance in negatively pressured environments.

CLEARANCES REQUIRED

MINIMUM CLEARANCES FOR THE FIREBOX ARE:

1/2" ON THE SIDES AND BACK AND 0 AT THE BOTTOM. TOP CLEARANCE IS 3", SEE FIGURE 7.1 FOR FRAMING DIMENSIONS.

NOTE: PROVIDE ADEQUATE CLEARANCES AROUND AIR OPENINGS INTO THE COMBUSTION CHAMBER.

NOTE: ADEQUATE ACCESSIBILITY CLEARANCES FOR SERVICING AND PROPER OPERATION MUST BE PROVIDED IN ACCORDANCE WITH ANSI Z21.50b.— 2007.

GAS PIPING AND GAS PRESSURE REQUIREMENTS

NOTE: THIS FIREPLACE HAS A HIGH BTU INPUT. GAS PIPING SIZE AND DISTANCES SHOULD BE APPROPRIATE FOR 100,000 BTU/HR INPUT.

All gas piping must be installed to comply with local codes, or, in the absence of local codes, with the latest edition of the National Fuel Gas Code ANSI Z223.1.

Unions in gas lines shall be of ground joint type. Compounds used on threaded joints of gas piping must be resistant to the action of liquefied petroleum gas. Gas piping must be of sufficient size to provide a minimum natural gas pressure at the appliance of 7" water column or 11" for L.P. gases for the purpose of input adjustment. The maximum inlet gas pressure to the unit must not exceed 10" for natural gas, and 13" for LP gases. If this unit is to be supplied with LP gas (bottled propane) the tank or bottle supplying the gas must have a regulator that reduces the gas pressure to between 11 and 13 inches water column. The control will not operate with gas line pressure directly from the tank and may leak gas due to this excessive pressure.

DANGER: OPERATION OF THIS UNIT ON LP GAS WITHOUT AN APPROVED REGULATOR AT THE TANK WILL LEAD TO GAS LEAKS AT THE CONTROL VALVE WITH POSSIBLE FIRE OR EXPLOSION.

Include a manual shut-off valve and union in the line so the control or heater may be disconnected for servicing. Include a drip leg and a plugged 1/8" N.P.T. tapping into the line also. The tapping must be accessible for the test gauge connection immediately upstream of the gas supply connection to the unit. Use a soap and water solution or liquid gas leak detector to coat each joint in the piping system and look for bubbles which indicate gas leaks. Repair all gas leaks.

CAUTION: THE APPLIANCE AND ITS APPLIANCE MAIN GAS VALVE MUST BE DISCONNECTED FROM THE GAS SUPPLY PIPING SYSTEM DURING ANY PRESSURE TESTING OF THAT SYSTEM AT TEST PRESSURES IN EXCESS OF 1/2 PSI (3.5 KPA).

THE APPLIANCE MUST BE ISOLATED FROM THE GAS SUPPLY PIPING SYSTEM BY CLOSING THE EQUIPMENT SHUTOFF VALVE DURING ANY PRESSURE TESTING OF THE GAS SUPPLY PIPING SYSTEM AT TEST PRESSURES EQUAL TO OR LESS THAN 1/2 PSI (3.5KPA).

DANGER: DO NOT USE CANDLES, MATCHES OR OTHER IGNITION SOURCES WHEN CHECKING FOR LEAKS. FUEL GASES ARE VERY FLAMMABLE AND IN CERTAIN CONCENTRATIONS, EXPLOSIVE . CHECKING FOR LEAKS WITH AN OPEN FLAME MAY LEAD TO FIRE OR EXPLOSION.

INSTALLATION INSTRUCTIONS

In planning the installation for the fireplace, it is necessary to determine where the unit is to be installed, the routing of the B-type vent system, and whether optional accessories are to be used. Gas supply piping should also be planned.

HD5030-TV OR HD4240-TV (with the use of the Outside Air Kit) can be installed in a bedroom (in the United States) which has a total volume of unconfined space appropriate to the particular installation. Refer to the National Fuel Gas Code ANSI Z223.1/NFPA 54 - (current edition), the Uniform Mechanical Code - (current edition), and Local Building Inspector for the options allowed in obtaining an effective bedroom volume of unconfined space.

The fireplace can be mounted on any of the following surfaces:

1. A flat combustible surface
2. A raised wooden platform
3. Four (4) corner supports

(Example: four (4) concrete masonry blocks.) These supports must be positioned so they contact all four corner edges on the bottom of the unit.

If the fireplace is to be installed on carpeting, tile, or other combustible material other than wood flooring, the fireplace must be placed upon a metal or wood panel extending the full width and depth of the unit.

Fireplace framing can be built before or after the fireplace is set in place. Framing should be positioned to accommodate wall covering and fireplace facing material. The fireplace framing should be constructed of 2 x 4 lumber or heavier. The framing headers may rest on the fireplace standoffs. Refer to Figure 7.1 for fireplace and framing reference dimensions.

CAUTION: VERIFY FIREPLACE DIMENSIONS, FRAMING METHODS AND WALL COVERING DETAILS BEFORE FRAMING CONSTRUCTION BEGINS.




Determine the exact position of the fireplace so that the vent run can be planned. Figure 2.1 shows possible locations for the fireplace; inside of a room, flush mount in a chase, or installed in a corner. Using a level, make sure the fireplace is properly positioned and squared.

WARNING: DUE TO HIGH TEMPERATURES, THE APPLIANCE SHOULD BE LOCATED OUT OF TRAFFIC AND AWAY FROM FURNITURE AND DRAPERIES. CLOTHING OR OTHER FLAMMABLE MATERIAL SHOULD NOT BE PLACED ON OR NEAR THE APPLIANCE.

HD5030-TV

INSTALLED AFTER
FIREPLACE IS
POSITIONED

MINIMUM
FRAMING
DIMENSIONS

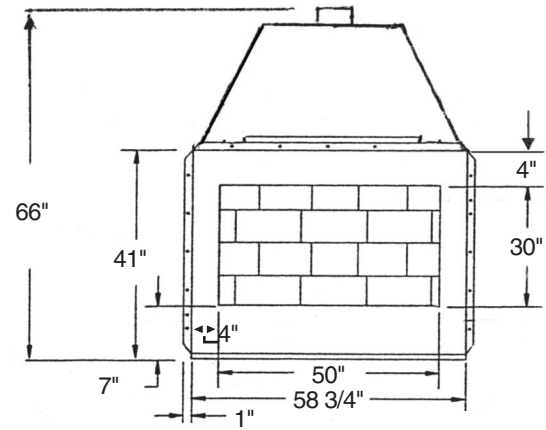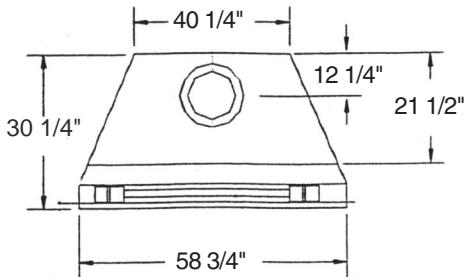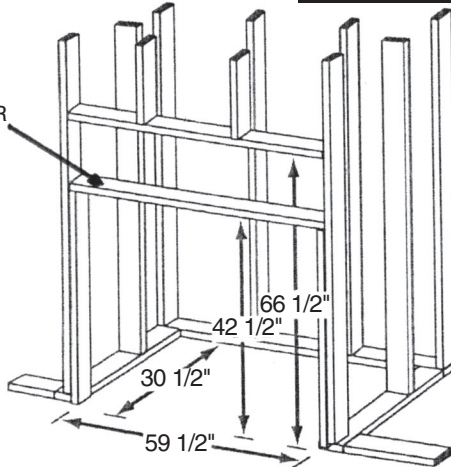

RIGHT SIDE




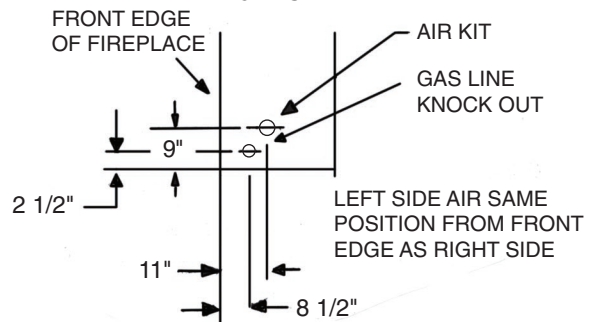


Figure 7.1

HD4240-TV

INSTALLED AFTER
FIREPLACE IS
POSITIONED

MINIMUM
FRAMING
DIMENSIONS

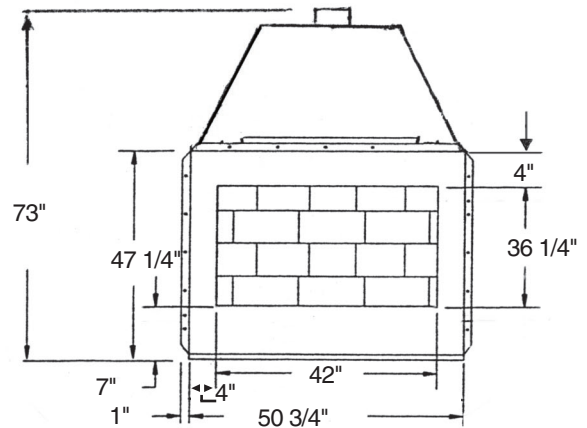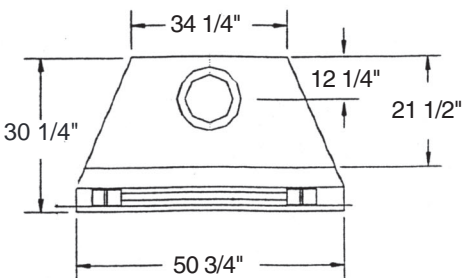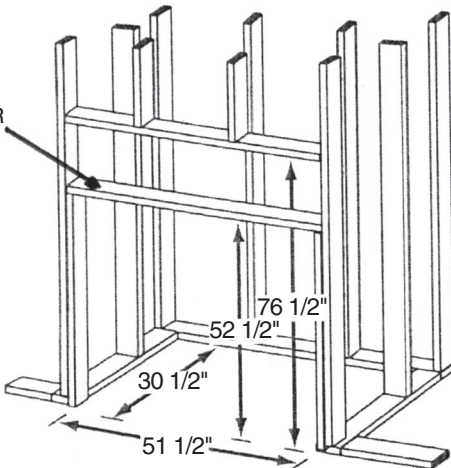

RIGHT SIDE

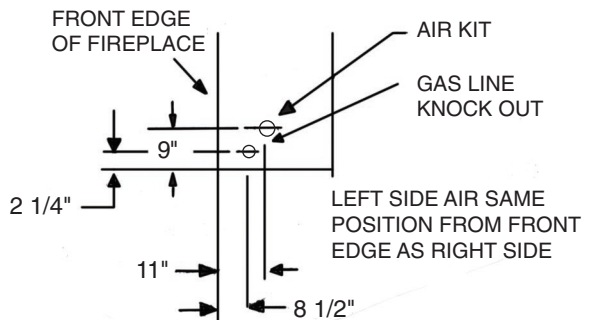


Figure 7.1

Installing Chimney/Vent System

Model HD5030-TV & HD4240-TV are approved to be used with 10" B-Type Gas Vent. Under most conditions the fireplace system will draw properly if the chimney height is determined in accordance with the following guidelines:

Note: (90-degree elbows are not approved! Maximum offset angle must not exceed 45 degrees.)

Many manufacturers of B-Type gas vent offer "High Performance," or "High Wind" caps. These caps limit the outlet area for flue gases to expel and **should not be used** with this fireplace. In the event of draft related problems due to extreme wind conditions a special wind ring is available.



1. If your chimney penetrates the roof within 10' of its peak, it must be extended at least 24" above your roof's peak and be at least 36" above the highest point of the roof opening (see below).
2. If the chimney penetrates the roof farther than 10' from its peak, measure from the center line of the chimney to a point 10' away, between the chimney and the peak of the roof. The top of the chimney must be at least 36" above the highest point of the roof opening (see below).
3. The 10' Rule of Thumb is a guide for calculating chimney height that works under most conditions. However, many factors can cause the need for additional chimney height beyond what 10' Rule of Thumb would indicate. Topographical factors can cause high-pressure zones, which prevent a chimney from drawing. This can occur if the house is located in a low-lying area, in a valley or near the base of a cliff or hillside. The same situation can occur if the chimney is near other steep roof lines or tall buildings. Areas with high winds also frequently require higher than normal chimneys.

Certain styles of architecture tend to interfere with a fireplace's draw. If the room in which the fireplace is located has a very high ceiling, flue gasses may enter the room unless the chimney is terminated at a level higher than that of the ceiling, even if the 10' Rule of Thumb indicates a shorter chimney height.

Note: Installations which will not allow the 10' rule to be followed must be submitted to Golden Blount Inc. for approval. 1-800-833-1139.

Warning! This gas appliance must not be connected to a chimney flue serving a separate solid-fuel burning appliance.

Note: A draft hood is installed and is the same atmospheric zone as the combustion air inlet to the appliance and is located so that the relief opening is accessible for checking vent operation.

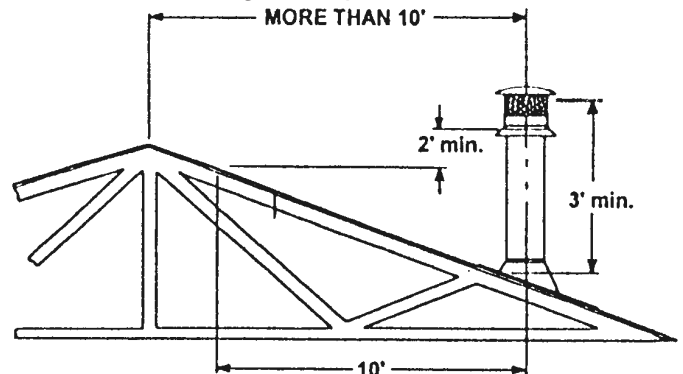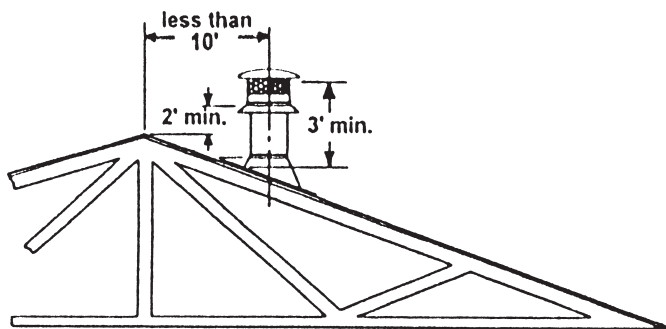

If your plans do not allow for the venting system as outlined previously in the "Installing chimney/vent system" section, you may contact ENERVEX, Inc. (formerly EXHAUSTO) at 800-255-2923. They will design an approved venting system to suit your venting needs. These power vented systems follow the standards and codes as outlined under the NFPA 54/ANSI Z223.1 Nation Fuel Gas Code. Please check with the local authority having jurisdiction in your area.

The engineers at ENERVEX are familiar with Golden Blount fireplaces and their systems will allow you to minimize the amount of vent pipe exposed outside of your home. Fireplaces may also be horizontally vented with these systems.

Installing Outside Air Kit

Model HD5030-TV & HD4240-TV are supplied with the component parts for outside combustion with the exception of the 4" flex duct. It is recommended that the outside air system be used whenever possible. Connect 4" Class-1 Flex duct or Metal Vent to duct collar on both sides of firebox; run ducts to fresh air source and terminate using duct termination caps. The outside air can be opened by pulling control knobs toward front of fireplace and closed by pushing towards back (Refer to figure 8.1).

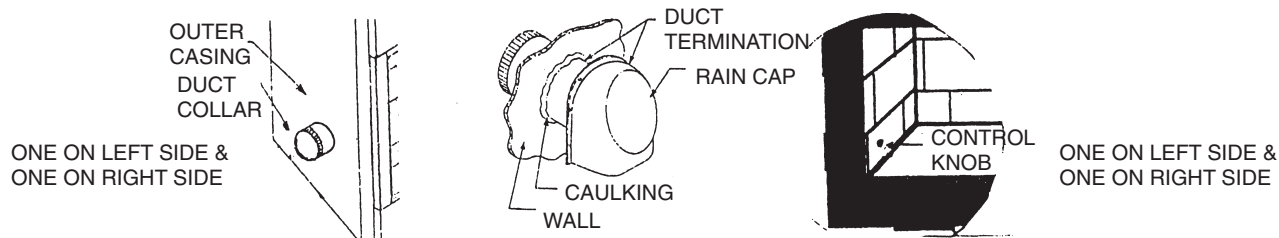


Figure 8.1

Connecting the Gas Line

Consult local building codes before gas line installation. This gas fireplace is designed to accept a 1/2" male flare fitting attached to a 1/2" supply line. Have the gas line installed by a qualified service person in accordance with all building codes. Install gas line to fireplace on the right side attaching gas line to the gas flex line inside the control box accessed by opening the control box door.

Finishing the Wall

Finish the wall with the material of your choice. Do not install a combustible mantle or other combustible projection above the fireplace opening unless it is a minimum of 12 inches above top of fireplace opening. (Figure 8.2)
*Non-combustible material used between top of opening and mantle must not exceed 3" in depth.

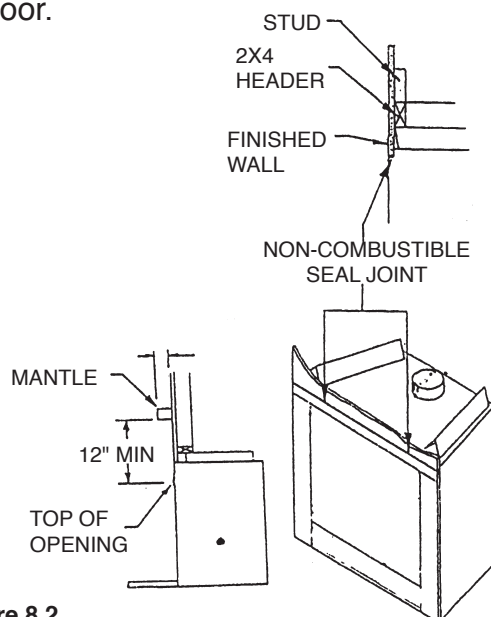


Figure 8.2

Caution: All joints between the finished wall and the fireplace surround (Top and Sides) can only be sealed with non-combustible material. Only non-combustible material can be applied as facing to the fireplace surround. (Figure 8.2)

Hearth Extension

A Hearth Extension may be installed, but it is not required for vented gas fireplaces.

REFRACTORY PANEL INSTALLATION

The Refractory Brick Panels should be carefully removed from shipping sleeve and positioned upright against a stable object.

1. Look into fireplace opening and locate back panel retaining clip positioned against rear wall of fireplace. (Figure 9.1) Remove (2) screws attaching clip to rear wall and set clip and screws aside. Position rear panel against rear wall and reattach clip with (2) screws.
2. Locate left panel retaining clip and remove (2) screws and set clip and screws aside. Position left panel against left wall and reattach clip with (2) screws.
3. Repeat Step 2 for right panel installation.



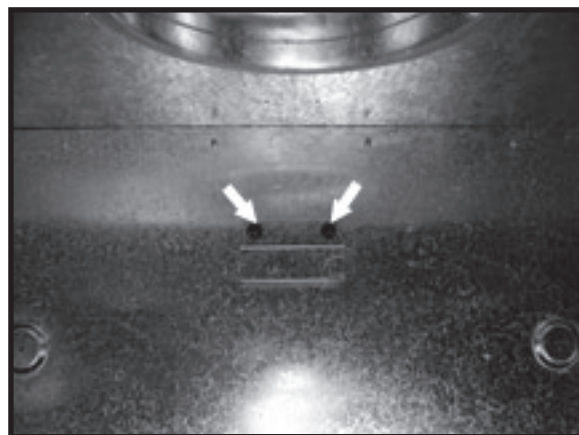


Figure 9.1

Gas Log Installation

1. Fill burner pan with silica sand supplied with fireplace. **Note!** On L.P. models vermiculite is used instead of silica sand. Be careful not to pour vermiculite over brass air mixer attached to burner pan. Air mixer holes must not be obstructed!
2. Pour vermiculite over the CEBB (controlled ember bed burner) tube creating a mound effect over the tube. Do Not flatten out vermiculite over tube.
3. Spread glowing embers over main burner pan and CEBB tube. **Note!** Be sure to create a gap between the main burner pan's glowing embers, thus enhancing a front curl of flame from the main burner.
4. Pour black rock around sides of pan for picture frame effect. **Note!** On L.P. models be careful not to pour black rock over brass air mixer attached to burner pan.
5. Position log grate against rear wall of fireplace and center left to right.
6. CEBB burner is supplied with adjustment valve and key to adjust front flame amount to desired look. Key can be removed after adjustment.

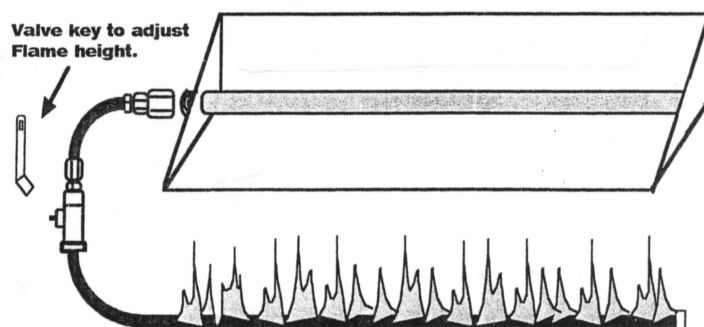

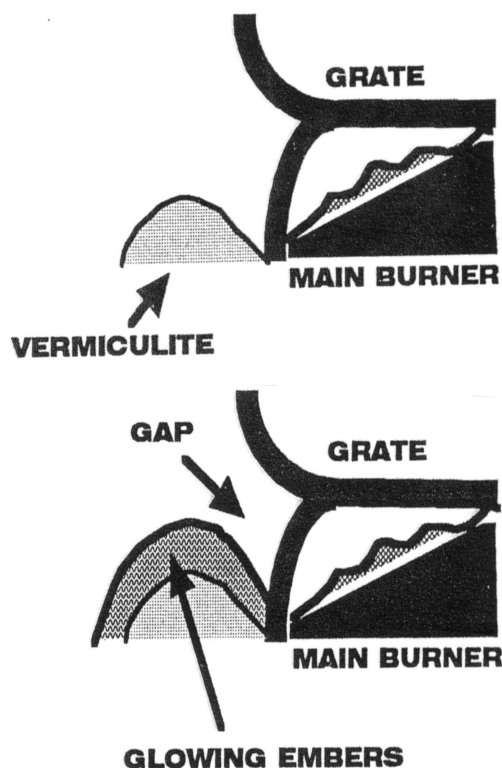

LOG PLACEMENT FOR MODEL #HD5030-TV LOG SET



STEP 1



STEP 2



STEP 3



STEP 4



STEP 5



STEP 6



STEP 7



STEP 8



FINAL ARRANGEMENT



LOG PLACEMENT FOR MODEL #HD4240TBF



STEP 1



STEP 2



STEP 3



STEP 4

FINAL ARRANGEMENT

OPERATING GUIDELINES

Upon completing the gas line connection, a small amount of air will be in the lines. When first lighting the pilot light, it will take a few minutes for the lines to purge themselves of this air. Once the purging is complete, the pilot and burner will light and operate as indicated in the instruction manual. Subsequent lighting of the appliance will not require such purging.


CAUTION: DURING THE INITIAL PURGING AND SUBSEQUENT LIGHTING, NEVER ALLOW THE GAS VALVE CONTROL KNOB TO REMAIN DEPRESSED IN THE A "PILOT" POSITION WITHOUT PUSHING THE RED IGNITOR BUTTON AT LEAST ONCE EVERY SECOND.

WARNING: CHILDREN AND ADULTS SHOULD BE ALERTED TO THE HAZARDS OF HIGH SURFACE TEMPERATURE AND SHOULD STAY AWAY TO AVOID BURNS OR CLOTHING IGNITION. YOUNG CHILDREN SHOULD BE CAREFULLY SUPERVISED WHEN THEY ARE IN THE SAME ROOM AS THE APPLIANCE.

IMPORTANT: TURN OFF GAS BEFORE SERVICING APPLIANCE. IT IS RECOMMENDED THAT A COMPETENT SERVICE TECHNICIAN PERFORM THESE CHECKUPS AT THE BEGINNING OF EACH HEATING SEASON.

WARNING: THE FLOW OF COMBUSTION AND VENTILATION AIR MUST NOT BE OBSTRUCTED.

When lit for the first time, the appliance will emit a slight odor for an hour or two. This is due to paint and lubricants used in the manufacturing process. The main burner flame characteristics are steady, not lifting or floating. Typically, the top 3/4 inch of the pilot generator should be engulfed in the pilot flame. A periodic check of these characteristics is necessary.

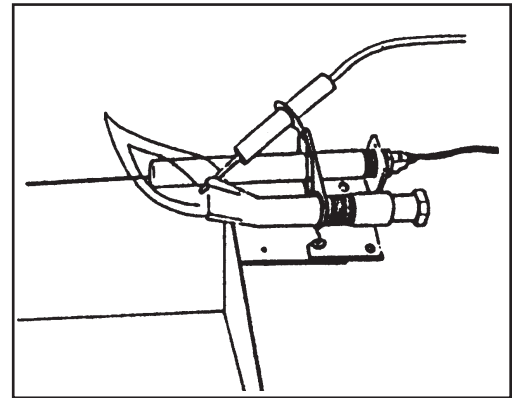


CAUTION: THE LOGS CAN GET VERY HOT! HANDLE ONLY WHEN COOL

MAINTENANCE INSTRUCTIONS


IMPORTANT: THE APPLIANCE AREA MUST BE KEPT CLEAR AND FREE FROM COMBUSTIBLE MATERIALS, GASOLINE AND OTHER FLAMMABLE VAPORS AND LIQUIDS.


Visually inspect pilot periodically. Brush or blow away any dust or lint accumulations. If pilot orifice is plugged, disassembly may be required to remove any foreign material from orifice or tubing.


Venting system should be periodically examined by a qualified service technician or agency to ensure proper air flow.

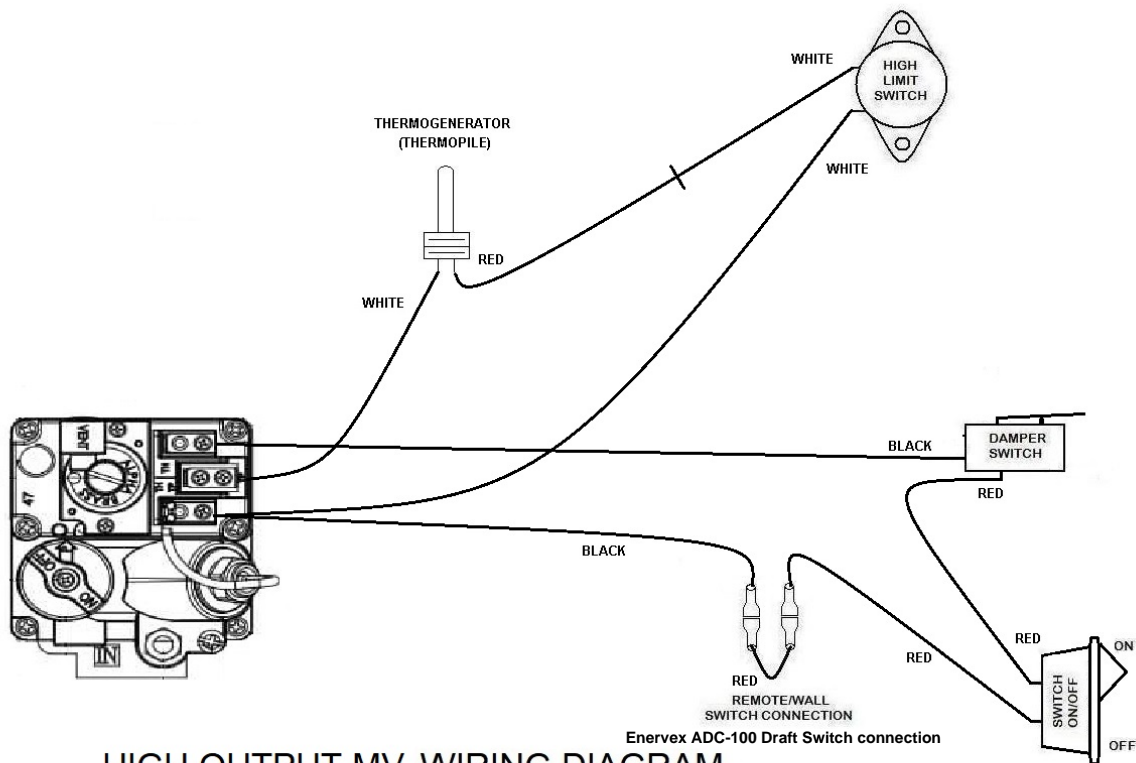

HIGH OUTPUT MV WIRING DIAGRAM
(WIRE COLOR MAY VARY)

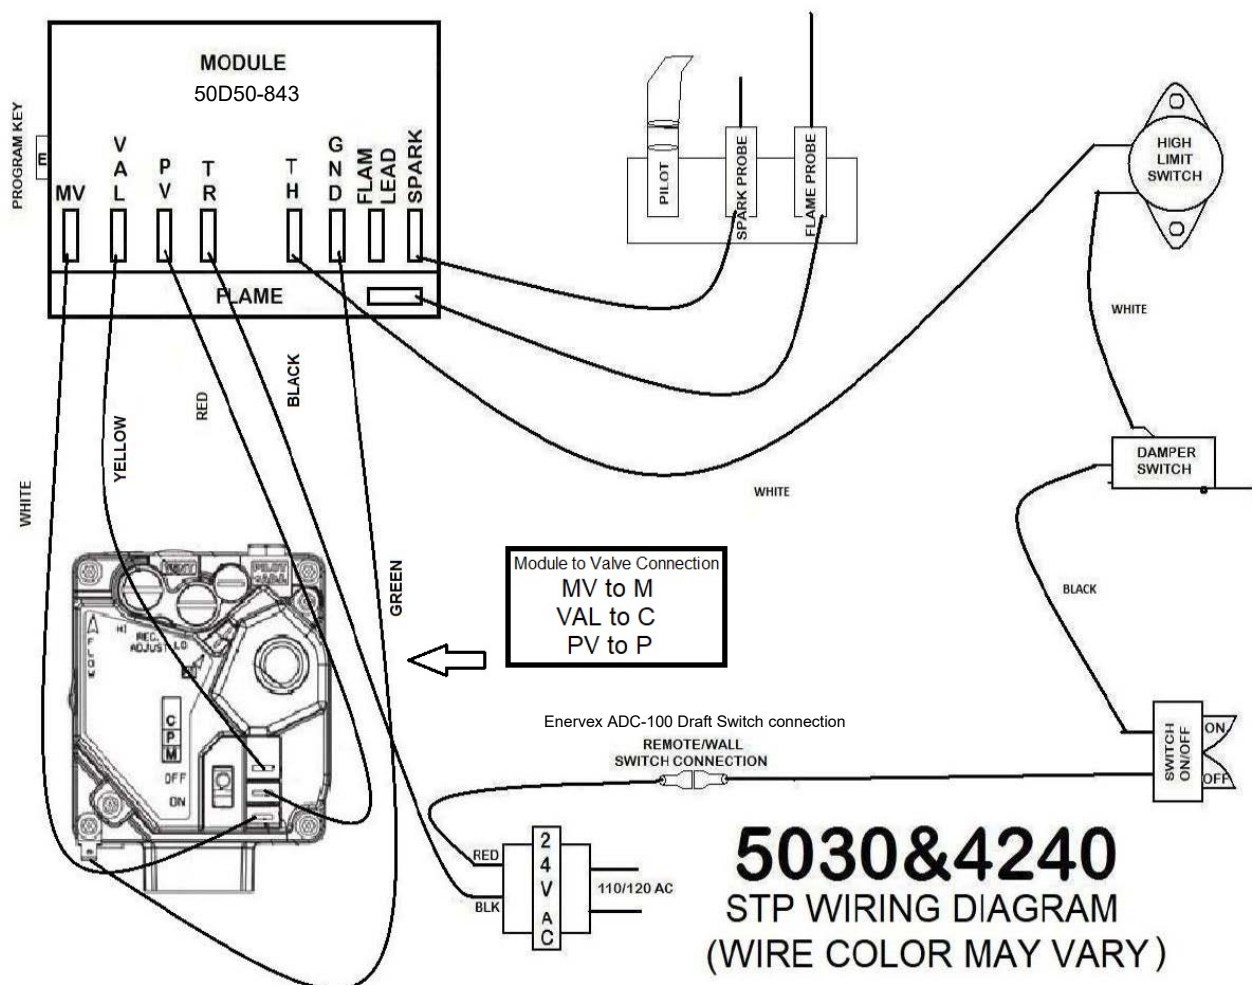

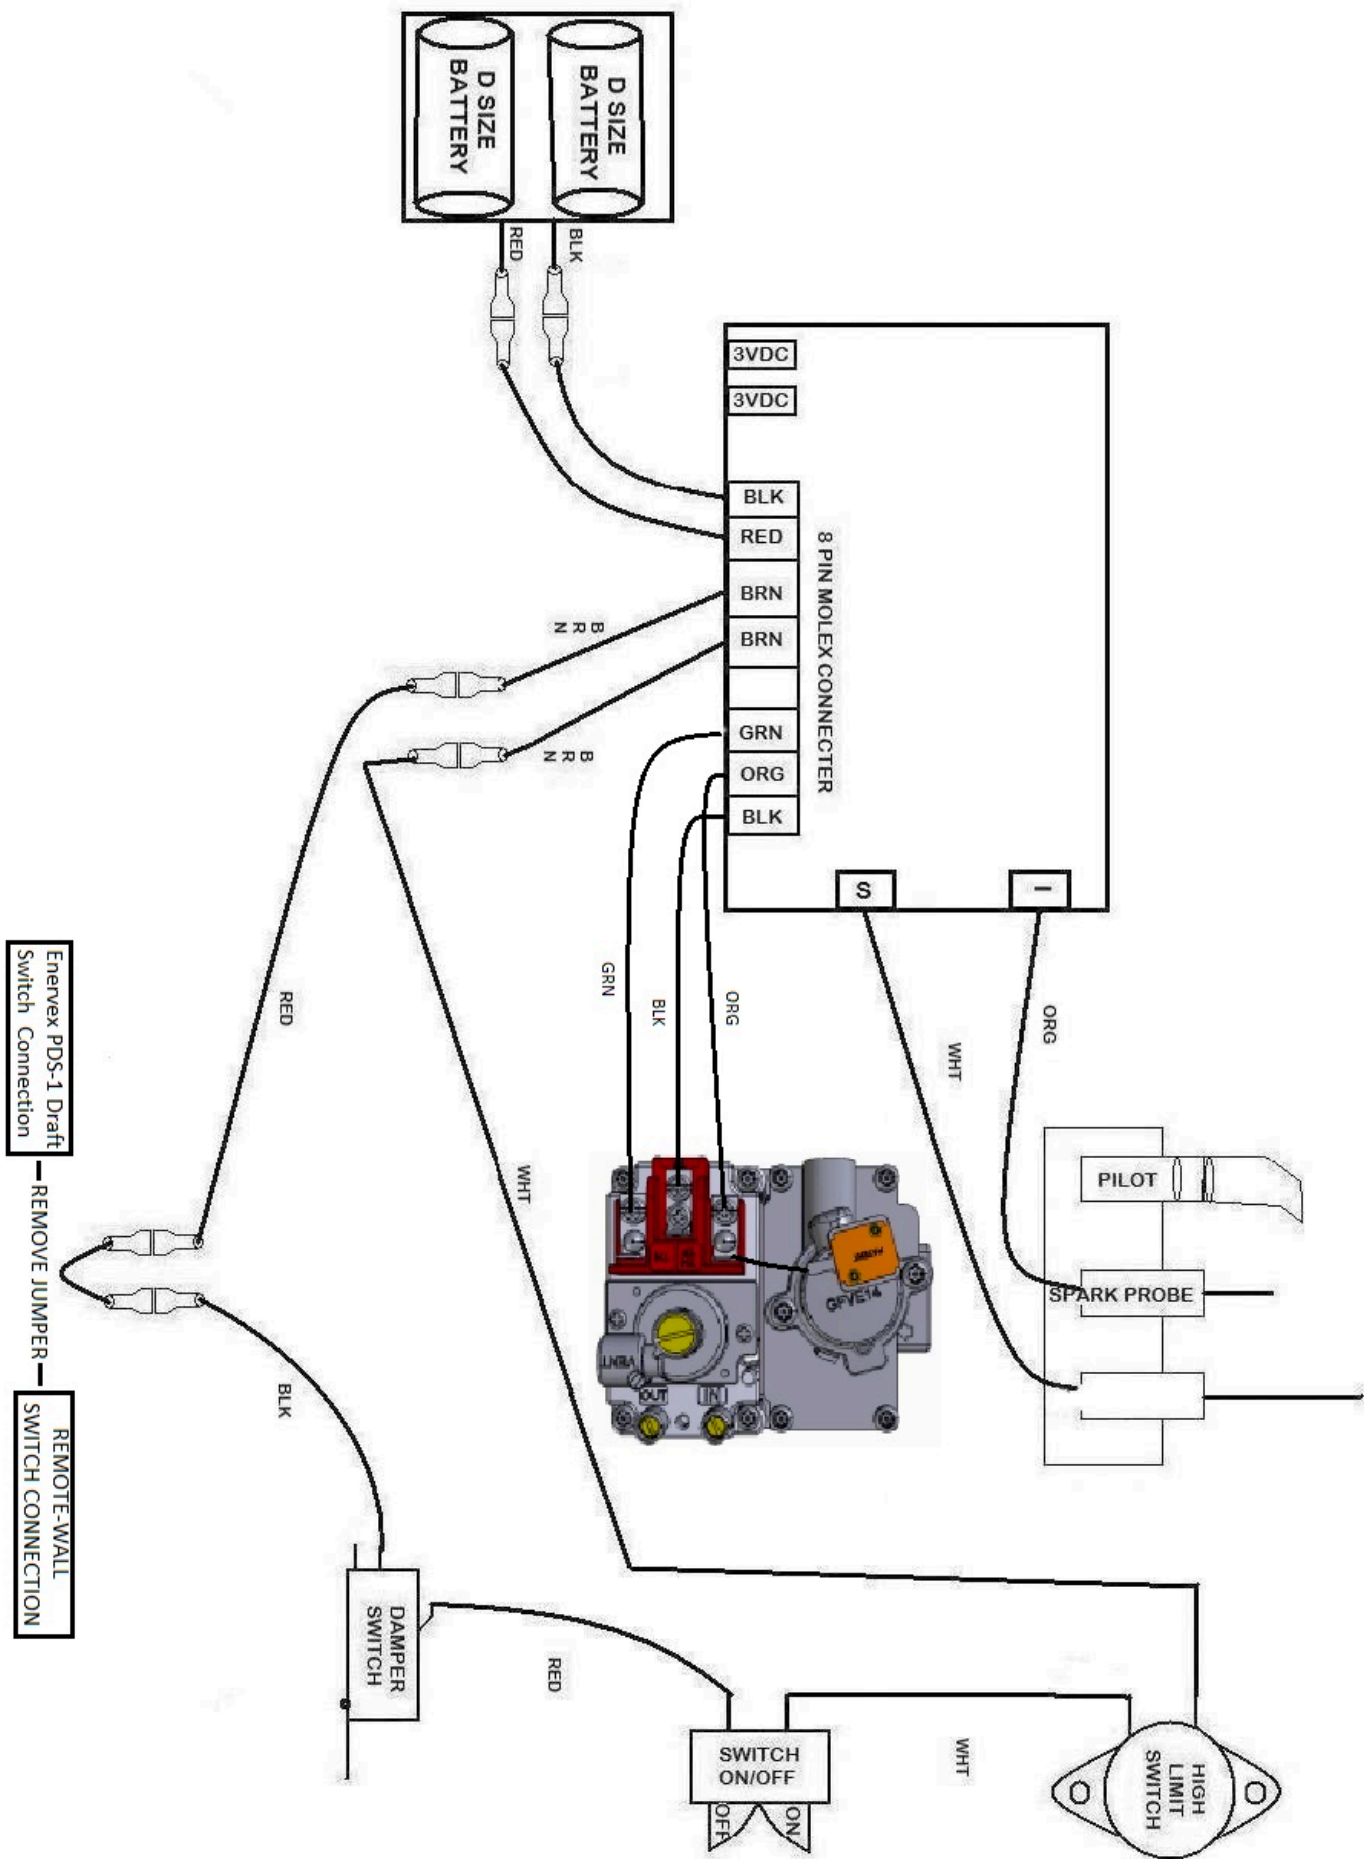

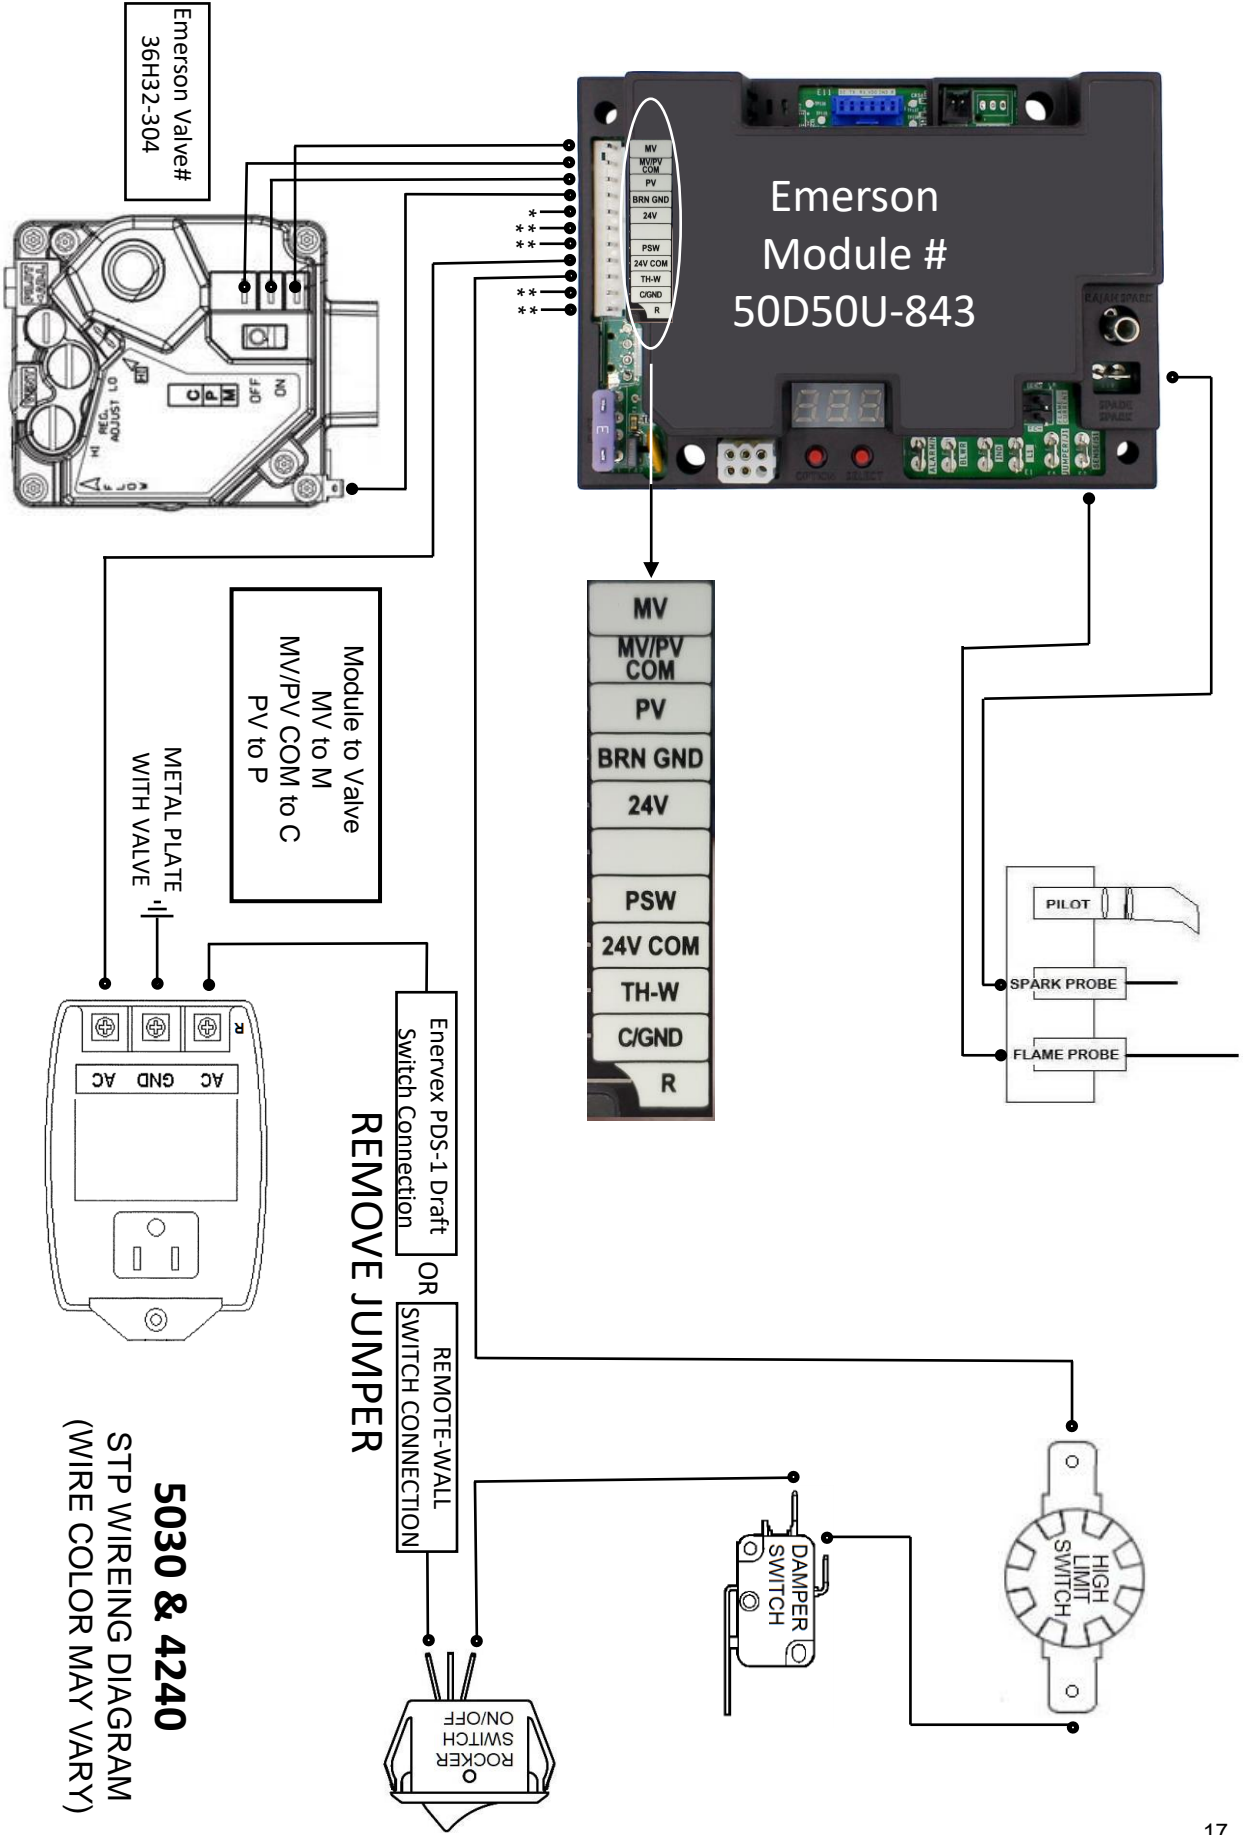

* FACTORY PROGRAM
** NOT USED

EMERSON TECHNICAL SUPPORT: 1-888-725-9797

5030 & 4240
STP WIRING DIAGRAM
(WIRE COLOR MAY VARY)

FOR YOUR SAFETY READ BEFORE LIGHTING

WARNING: IF YOU DO NOT FOLLOW THESE INSTRUCTIONS EXACTLY, A FIRE OR EXPLOSION MAY RESULT CAUSING PROPERTY DAMAGE, PERSONAL INJURY OR LOSS OF LIFE.

A. This appliance has a pilot. When lighting the pilot, follow these instructions exactly.

B. BEFORE LIGHTING smell all around the appliance area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.

WHAT TO DO IF YOU SMELL GAS:


- ☐ Do not try to light any appliance.
- ☐ Do not touch any electric switch: Do not use any phone in your building.
- ☐ Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- ☐ If you cannot reach your gas supplier call the fire department.

C. Use only your hand to push in or turn the gas control knob. Never use tools. If the knob will not push in or turn by hand don't try to repair it, call a qualified service technician. Forced or attempted repair may result in a fire or explosion.

D. Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the gas control system which has been under water.

LIGHTING INSTRUCTIONS

1. "STOP" Read the safety information above first.
2. To access controls, open valve access panel.
3. Turn the control to the "OFF" position. To do this, you must turn the knob clockwise to the pilot position and then press in and continue turning clockwise to the "OFF" position.

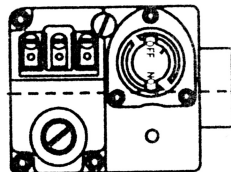

GAS VALVE

4. WAIT FIVE (5) MINUTES TO CLEAR OUT ANY GAS. If you then smell gas, STOP! Follow "B" in the safety information above. If you don't smell gas, go to next step.
5. The pilot does not require accessing for lighting purposes. The pilot is located inside the combustion chamber.
6. To put the control in the pilot position turn the control knob counter-clockwise to the pilot position.


THERMOPILE

PILOT BURNER



7. To light the pilot, depress the control knob and then depress the red piezo button until it makes a clicking sound. It may be necessary to repeat this step. If the pilot does not light after Ten seconds, go back to step 3. The control knob should be held Down for a MINUTE after pilot ignition. If the pilot lights, but will not stay lit after two tries, turn the gas control knob to the "OFF" position and call your Service technician or gas supplier. If the control knob does not pop out when released, STOP - shut off the gas supply to the fireplace control valve and immediately call your service technician or gas supplier.
8. After the pilot has been lit, the Burner can be turned on by turning the knob counter-clockwise To the "ON" position. Then turn the ON/OFF switch to the "ON" position. **Note: Damper control lever must be in the "open" position to ignite.**

TO TURN OFF GAS TO APPLIANCE

1. Open valve access door panel
2. Turn knob clockwise  to pilot position then depress and continue turning to "OFF"
3. Close access door panel

LPG (PROPANE) WARNING

THE FOLLOWING WARNING APPLIES TO INSTALLATIONS USING L.P. (PROPANE GAS):

WARNING: To avoid possible injury, fire and explosion, please read and follow these precautions and all instructions of this appliance before lighting the pilot. This appliance uses L.P. (Propane) gas which is heavier than air and will remain at the floor level if there is a leak. Before lighting, smell at floor level and/or use other means (such as using a soap solution on all piping and connections, using a gas detector, etc.) to check for gas leaks. **NOTE:** L.P. (Propane) gas can become odorless and **CANNOT** always be detected by smell. If you smell gas, detect a gas leak or suspect that a gas leak exists, follow these rules:

1. Get all people out of building.
2. **DO NOT** light matches. **DO NOT** turn electric lights or switches on or off in area. **DO NOT** use an electric fan to remove gas from area. **DO NOT** use a telephone inside of building.
3. Shut off gas at L.P. tank outside of building.
4. Telephone gas company and fire department. Ask instructions. Before hanging up, give your name, address and phone number. **DO NOT** go back into building.

If your L.P. tank runs out of fuel, turn off gas at the appliance. After L.P. tank is refilled, appliance must be re-lit according to manufacturer's instructions. If the gas control has been exposed to **WATER** in any way, **DO NOT** try to use it. It must be replaced. **DO NOT** attempt repair on gas control or appliance.

Tampering is **DANGEROUS** and voids all warranties. Any component that is found to be faulty, must be replaced with an approved component.

IMPORTANT: Always keep the appliance area clear and free from combustible materials, gasoline and other flammable vapors and liquids.

Never obstruct the flow of combustion and ventilation air. Keep the front of the appliance clear of all obstacles and materials.

To obtain proper operation, it is imperative that the pilot and main burner flame characteristics are steady, not lifting or floating. Typically the top 3/4 inch at the pilot generator should be engulfed in the pilot flame.

IMPORTANT - PLEASE NOTE L.P. GAS MODELS

MODERATE SOOT ACCUMULATION IS CONSIDERED NORMAL FOR L.P. MODELS. TO KEEP THIS SOOT ACCUMULATION TO A MINIMUM, REDUCE THE FLAME IMPINGEMENT BY SPACING FRONT AND BACK LOGS AS FAR APART AS POSSIBLE.

TROUBLE SHOOTING

With proper installation and maintenance, your new Gas Fireplace should provide years of trouble-free service. If you do experience a problem, refer to the trouble shooting guide shown below. This guide will assist a qualified service person in the diagnosis of problems and the corrective action to be taken.

<u>SYMPTOM</u>	<u>POSSIBLE CAUSE</u>	<u>CORRECTIVE ACTION</u>
1. Spark ignitor will not light pilot after triggering	A. Defective ignitor (no spark at electrode)	1. Check for spark at electrode and pilot; if no spark exist and electrode wire is properly connected, replace ignitor.
	B. Defective or misaligned electrode at pilot (spark at electrode)	1. Using a match, light pilot. If pilot lights, turn off pilot and trigger the red button again. If pilot lights, an improper gas/air mixture caused the bad lighting and a longer purge period is recommended. If pilot will not light - check gap at electrode and pilot should be 1/8 inch to have a strong spark. If OK, replace pilot
	C. No gas or low gas pressure	1. Check remote shut off valves from fireplace. Usually there is a valve near the fireplace and sometimes there is a valve near the main. There can be more than one valve between the fireplace and main. 2. Low pressure can be caused by a variety of situations such as a bent line, too narrow diameter of pipe or even low line pressure. Check for kinked lines. If none, consult with Plumber or gas supplier. If L.P. Gas is used you may be out of fuel.

IMPORTANT: Any safety screen or guard removed for servicing an appliance must be replaced prior to operating the appliance.


TROUBLE SHOOTING (CONT'D)

<u>SYMPTOM</u>	<u>POSSIBLE CAUSE</u>	<u>CORRECTIVE ACTION</u>
2. Pilot will not stay lit after carefully following lighting instructions.	A. Defective pilot generator	<p>1. Check pilot, flame must impinge on pilot generator. Clean and or adjust pilot for maximum flame impingement on generator.</p> <p>2. Be sure wire connections from generator at gas valve terminals are tight and generator is fully inserted into pilot bracket.</p> <p>3. Check thermogenerator with millivolt meter. Take reading at "TH-TP" and "TP" terminals of gas valve. Should read 325 millivolts minimum while holding valve knob depressed in pilot position, pilot lit, and ON/OFF switch "OFF". Replace faulty generator if reading is below specified minimum.</p>
	B. Defective valve	<p>1. Connect the millivolt meter probes to the "TH-TP" and "TP" terminals on the gas valve. Turn knob to pilot position, depress and light pilot light. If meter reading is greater than 325 m.v. after 30 seconds, the pilot generator is good. If pilot does not stay lit, the valve is defective. If the meter reading is less than 325 m.v., the thermo-generator is defective.</p>
	C. Open wire connection in pilot circuit	<p>1. Check wire continuity and connections in pilot circuit.</p>

REPLACEMENT PARTS HD5030-TV

THE FOLLOWING REPLACEMENT PARTS ARE AVAILABLE FROM YOUR GOLDEN BLOUNT DEALER


ITEM	PART #	DESCRIPTION	ITEM	PART #	DESCRIPTION
1	HD-101	Gas Valve - N/G	18	HD-118	Step 2 Log
2	HD-102	Gas Valve - LP	19	HD-119	Step 3 Log
3	HD-103	1/4" Pilot Line	20	HD-120	Step 4 Log
4	HD-104	1/2" Burner Line	21	HD-121	Step 5 Log
5	HD-106	Piezo Ignitor	22	HD-122	Step 6 Log
6	HD-105	On/Off Switch	23	HD-123	Step 7 Log
7	HD-107	Pilot Assembly - Nat.	24	HD-124	Step 8 Log
8	HD-108	Pilot Assembly - LP	25	HD-125	Vermiculite (2 Bags LP)
9	HD-109	Thermopile	26	HD-126	Volcanic Rock
10	HD-110	Pilot Bracket	27	HD-127	Temp Limit Switch
11	HD-111	Burner Orifice NAT	28	HD-128	Damper Switch
12	HD-112	Burner Orifice LP	29	HD-129	Silica Sand (NAT)
13	HD-113	Burner Pan	30	HD-130	Glowing Embers
14	HD-114	Log Grate			
15	HD-115	Step 1 Left Log			
16	HD-116	Step 1 Right Log			
17	HD-117	Step 1 Back Log			

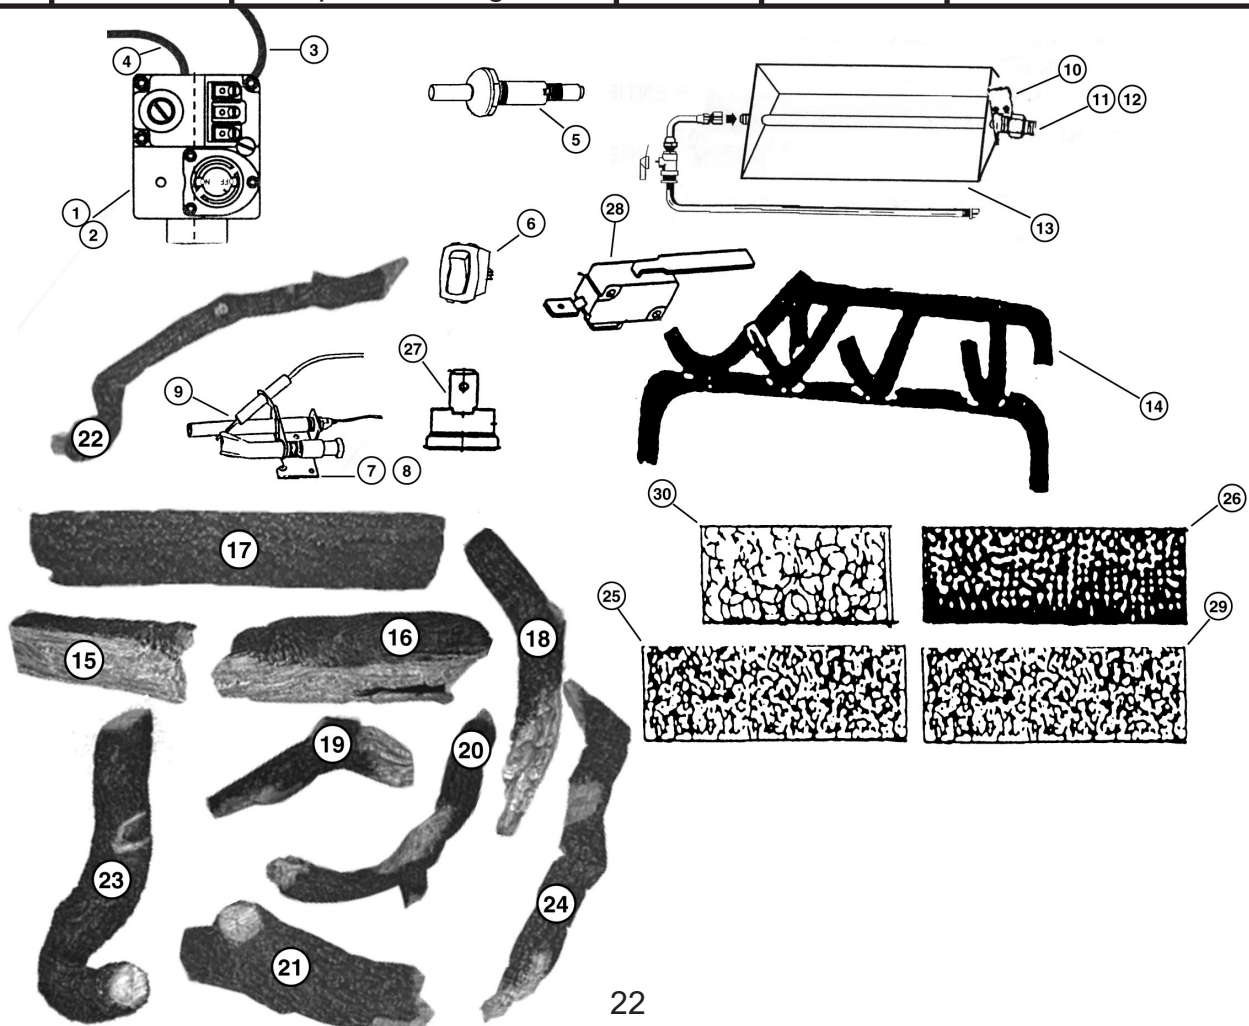

REPLACEMENT PARTS HD4240-TV

THE FOLLOWING REPLACEMENT PARTS ARE AVAILABLE FROM YOUR GOLDEN BLOUNT DEALER

ITEM	PART #	DESCRIPTION	ITEM	PART #	DESCRIPTION
1	HD-101	Gas Valve - N/G	18	HD-218	Step 3 Log
2	HD-102	Gas Valve - LP	19	HD-219	Step 1 Left Log
3	HD-103	1/4" Pilot Line	20	HD-220	Step 1 Right Log
4	HD-104	1/2" Burner Line	21	HD-221	Step 1 Back
5	HD-106	Piezo Ignitor	22		
6	HD-105	On/Off Switch	23		
7	HD-107	Pilot Assembly - Nat.	24		
8	HD-108	Pilot Assembly - LP	25	HD-125	Vermiculite (2 Bags LP)
9	HD-109	Thermopile	26	HD-126	Volcanic Rock
10	HD-110	Pilot Assembly Bracket	27	HD-127	Temp Limit Switch
11	HD-211	Burner Orifice NAT	28	HD-128	Damper Switch
12	HD-112	Burner Orifice LP	29	HD-129	Silica Sand (NAT)
13	HD-213	Burner Pan Assembly	30	HD-130	Glowing Embers
14	HD-214	Log Grate			
15	HD-215	Step 4 Bottom Log			
16	HD-216	Step 4 Top Log			
17	HD-217	Step 2 Log			

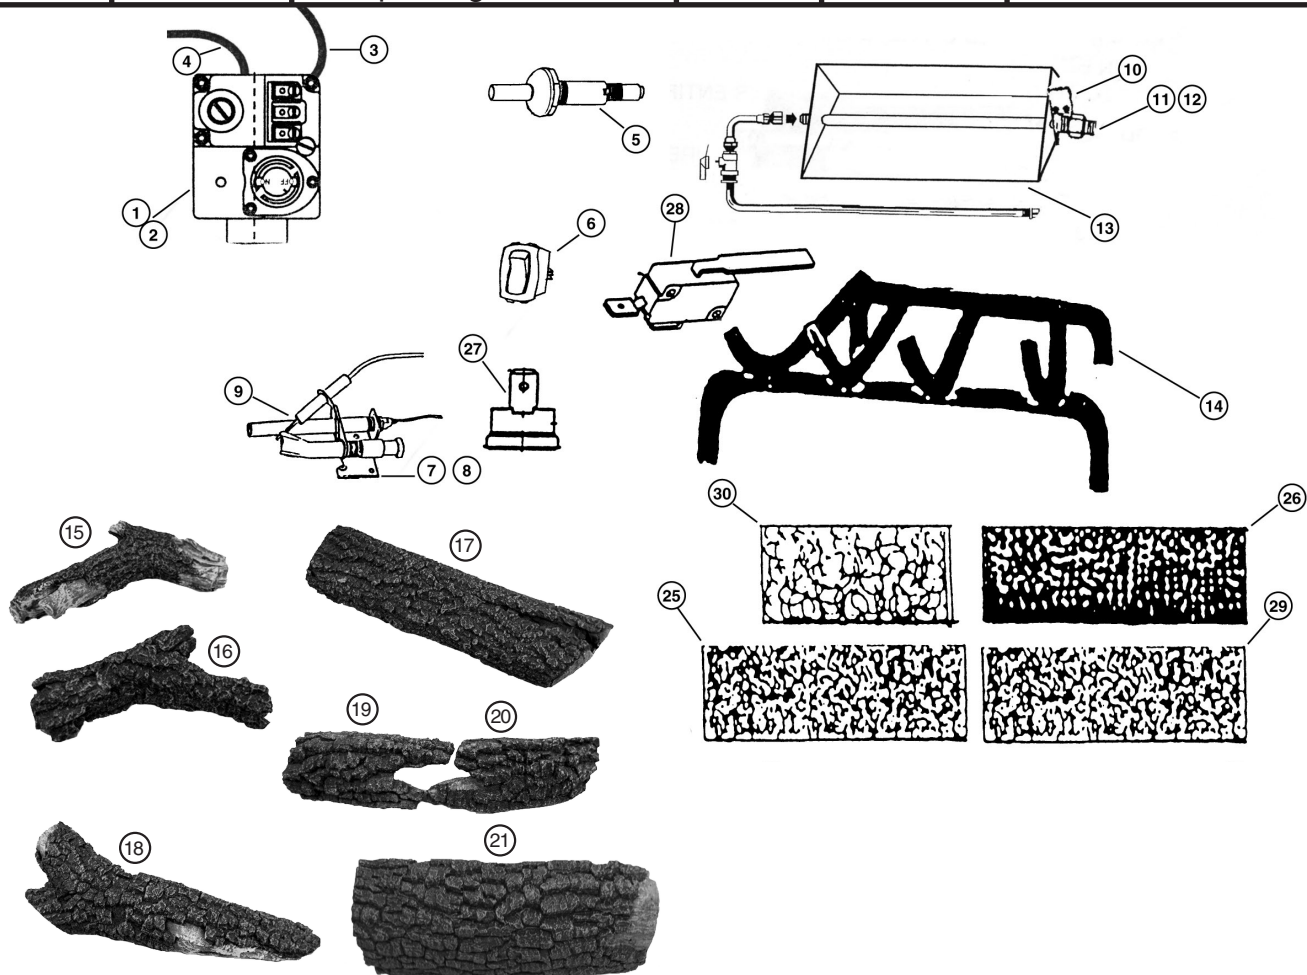

TWO YEAR LIMITED WARRANTY

THIS WARRANTY IS LIMITED TO TOP-VENT GAS FIREPLACES MANUFACTURED AND ASSEMBLED BY GOLDEN BLOUNT.

IF GOLDEN BLOUNT FINDS THAT ANY PART OR PORTION OF THE FIREPLACE COVERED BY THIS WARRANTY IS DEFECTIVE IN MATERIAL OR WORKMANSHIP UNDER NORMAL USE AND SERVICE AS DESCRIBED IN THE INSTALLATION AND OPERATING INSTRUCTIONS, GOLDEN BLOUNT WILL TAKE THE FOLLOWING ACTIONS:

1. WITHIN THE FIRST YEAR FROM THE DATE OF INSTALLATION, GOLDEN BLOUNT SHALL, AT ITS OPTION REPLACE OR REPAIR ANY SUCH DEFECT IN MATERIAL OR WORKMANSHIP, AT GOLDEN BLOUNT'S EXPENSE, INCLUDING A REASONABLE LABOR ALLOWANCE AS DETERMINED BY GOLDEN BLOUNT. GOLDEN BLOUNT SHALL NOT BE RESPONSIBLE FOR ANY OTHER LABOR COSTS, OR EXPENSES, INCLUDING INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES.
2. DURING THE SECOND YEAR AFTER THE DATE OF INSTALLATION, GOLDEN BLOUNT SHALL SUPPLY REPLACEMENT PARTS AT THE CURRENT WHOLESALE PRICE, BUT GOLDEN BLOUNT SHALL NOT BE RESPONSIBLE FOR ANY LABOR, TRANSPORTATION, OR THE INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.
3. ALL FACTORY OPTIONAL COMPONENTS OR ACCESSORIES FOUND TO BE DEFECTIVE WILL BE REPAIRED OR REPLACED WITHOUT CHARGE DURING THE FIRST YEAR AFTER INSTALLATION.

GOLDEN BLOUNT MAY DISCHARGE ITS ENTIRE WARRANTY LIABILITY BY REFUNDING THE PRICE OF THE PRODUCT.

PRODUCTS MADE BY OTHER MANUFACTURERS, SOLD WITH THE FIREPLACE OR THEREAFTER ARE NOT COVERED BY THIS LIMITED WARRANTY. THE USE OF OTHER UNAUTHORIZED COMPONENTS WILL MAKE THIS WARRANTY NULL AND VOID.

THIS LIMITED WARRANTY WILL BE VOID IF THE APPLIANCE IS NOT INSTALLED BY A QUALIFIED INSTALLER AND ACCORDING TO THE INSTALLATION INSTRUCTIONS. THE LIMITED WARRANTY ALSO IS VOID IF THE FIREPLACE IS NOT OPERATED, AT ALL TIMES, ACCORDING TO THE OPERATING INSTRUCTIONS FURNISHED.

SOME STATES DO NOT ALLOW EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITS ON THE DURATION OF IMPLIED WARRANTIES SO THESE LIMITATIONS MAY NOT APPLY TO YOU.

GOLDEN BLOUNT RESERVES THE RIGHT TO INVESTIGATE ANY AND ALL CLAIMS AGAINST THIS WARRANTY AND TO DECIDE ON THE METHOD OF SETTLEMENT.

GOLDEN BLOUNT IS NOT RESPONSIBLE FOR WARRANTY WORK COMPLETED WITHOUT OBTAINING GOLDEN BLOUNT'S CONSENT. GOLDEN BLOUNT EMPLOYEES AND DEALERS HAVE NO RIGHT TO ALTER THIS WRITTEN WARRANTY.

WARRANTY INFORMATION

PLEASE BE ABLE TO PROVIDE THE FOLLOWING INFORMATION WHEN COMMUNICATING WITH GOLDEN BLOUNT OR ITS DEALERS OR DISTRIBUTORS REGARDING SERVICE UNDER THIS WARRANTY.

MODEL NO.
SERIAL NO.
DATE OF PURCHASE

Golden Blount
4301 Westgrove Dr.
Addison, TX 75001
(972) 250-3113