




*Golden Blount*




CERAMIC GAS LOGS AND FIREPLACE ACCESSORIES

# ROBERT SHAW MILLI-VOLT PILOT WIRING AND ASSEMBLY INSTRUCTIONS

## ASSEMBLY

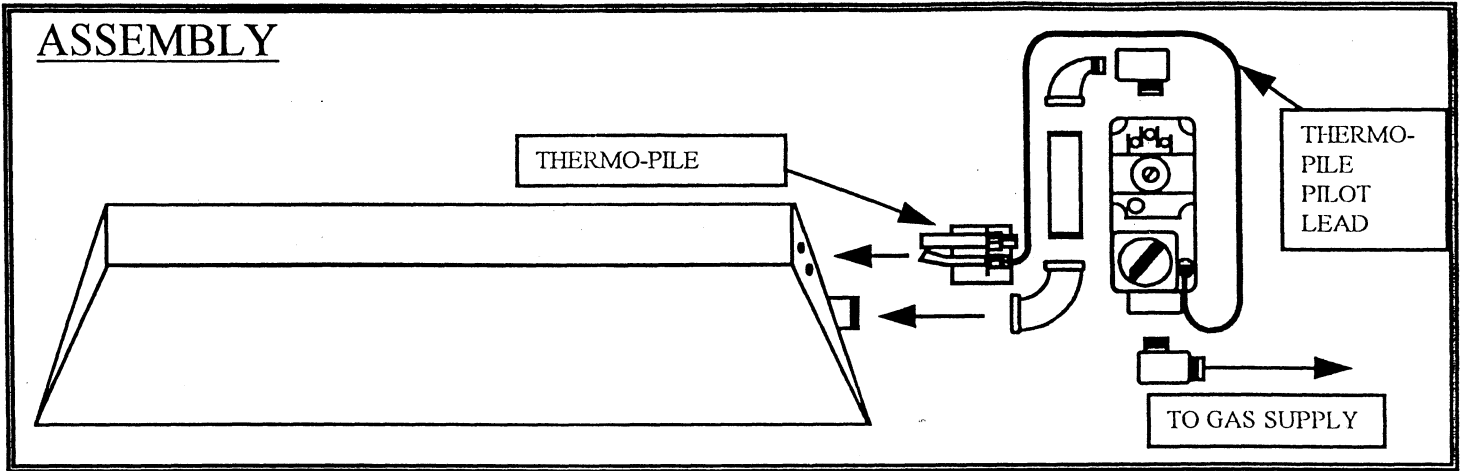

## WIRING

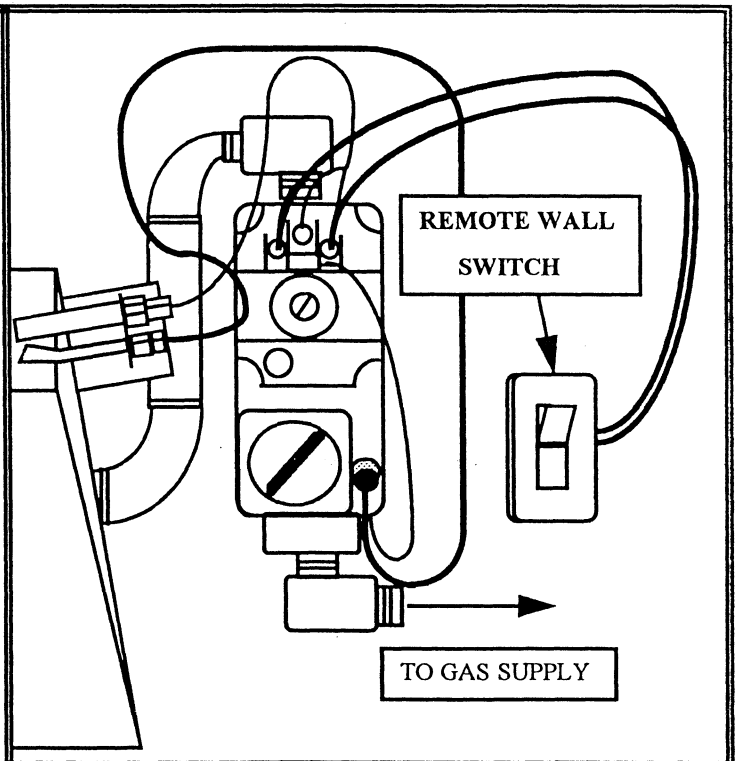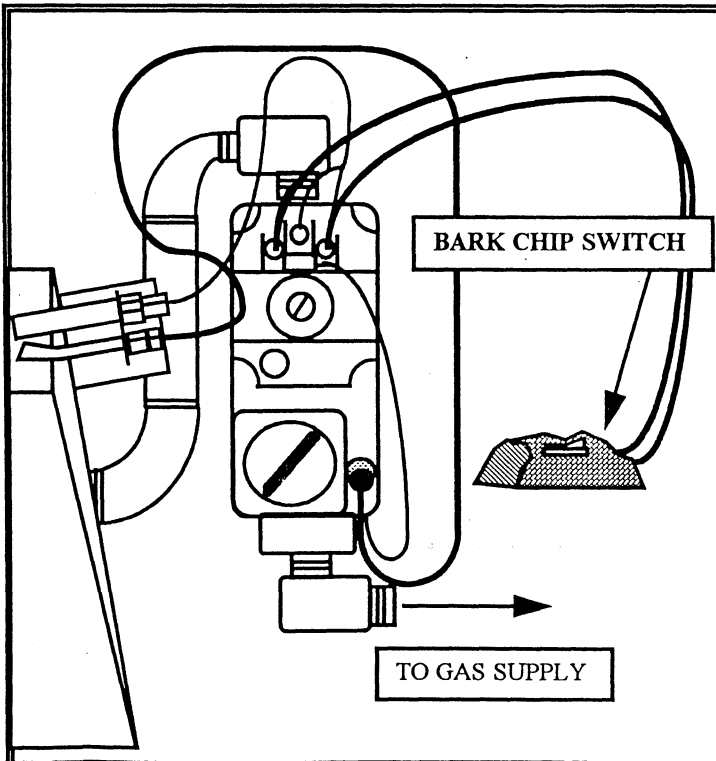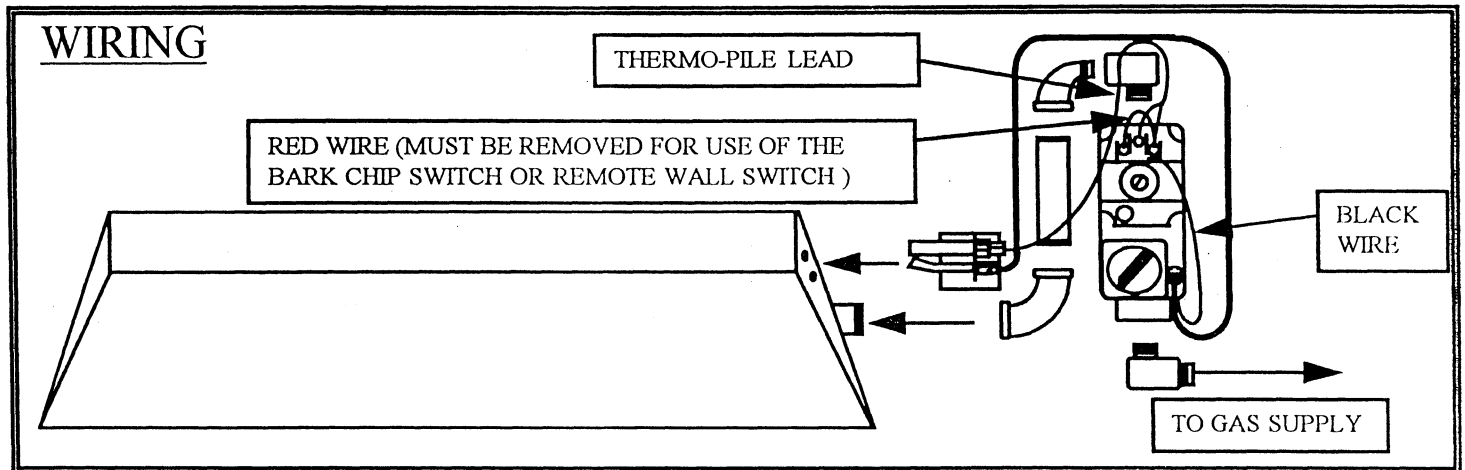



*Golden Blount*

CERAMIC GAS LOGS AND FIREPLACE ACCESSORIES

**ROBERT SHAW MILLI-VOLT PILOT WIRING AND ASSEMBLY  
INSTRUCTIONS CONTINUED**

COMPLETED ASSEMBLY

**FINAL STEP: PLACE THE HEAT  
SHIELD OVER THE VALVE.**

